


Description:

Sentry Sprinklers Model **PI-6030** is a Wall Type Indicator Post that is installed in combination with a buried non-rising stem gate valve to indicate the buried valves opening position. The post sight window indicates whether the valve is in the open or shut position. The post can be field adjusted for the required depth for the buried valve. The Indicator Post is anti-corrosion with 10 mil (250μ) of fusion-bonded epoxy (FBE) coating on both inside & outside. All other components are made of corrosive resistance materials.

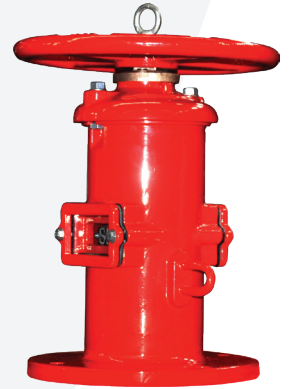


Model **PI-6030**



Features:

- Suitable for sizes 4" - 12".
- Meets all requirements for UL789 and FM1110.
- Easy field adjustment, up to 26".
- Epoxy coated inside & outside.
- Casted 12" Faceplate Flange.

Dimensions:

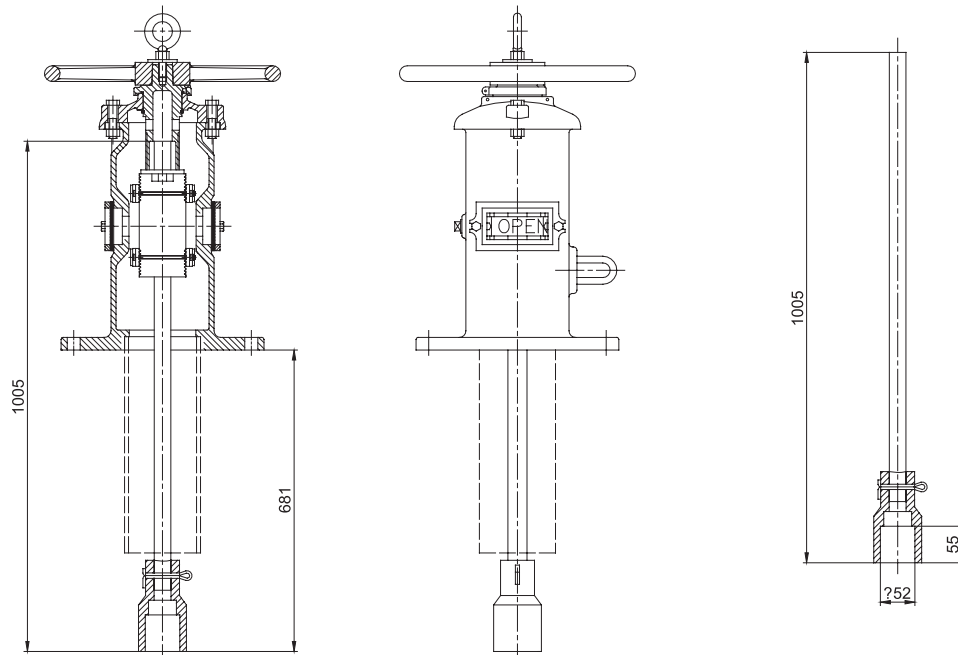

Material List:

ITEM	NAME	MATERIAL
1	Lifting Eye Bolt	ASTM A105
2	Hex Nut	ASTM A105
3	Washer	ASTM A105
4	Hand Wheel	ASTM A536
5	Operating Nut	ASTM B62
6	Hex CapScrew	ASTM A105
7	Hex Nut	ASTM A105
8	Snap Ring	AISI 066
9	TargetCarrierNut	ASTM B62
10	Target	ASTM B108
11	Hex CapScrew	ASTM A105
12	Window Glass	LEXAN-UN
13	Window Glass Gasket	PTFE

ITEM	NAME	MATERIAL
14	Hex CapScrew	ASTM A105
15	Hex Nut	ASTM A105
16	Body	ASTM A536
17	Stand Pipe	ASTM A53
18	Stem	AISI 1045
19	Cotter Pin	AISI 304
20	CraneCoupling	ASTM A536
21	Plug	AISI 304
22	Cover	ASTM A126B
23	Cross Recessed Countersunk Head Screw	AISI 304
24	Locking Nose	ASTM 307 B
25	Window Cover	ASTM A307B
-	-	-

Field Adjustment:

- Remove the top section from the top of the Indicator Post assembly.
- Set the “OPEN” and “SHUT” targets for the appropriate valve size.
- Reattach the top section to the top of the Indicator Post assembly.
- Design and materials are subject to change without notice.